

**Supplemental Specification
2005 Standard Specification Book**

SECTION 01574

ENVIRONMENTAL CONTROL SUPERVISOR

Delete Section 01574 in its entirety. Refer to Section 01571: Environmental Controls